

**SECTION 20**

**ALPHABETICAL INDEX**

This section is to follow.

	— (A) —	
<b>Accelerator pump</b>	2-7	14-19
<b>A.C. generator</b>	2-23	Description 14-19
<b>Adjustment of manual shift drive arm</b>	7-107, 7-150	Maintenance 14-20
<b>Air cleaner</b>	2-5, 19-5,	<b>Air bleeding</b> 19-9
		<b>Automatic transmission</b> 19-8
	— (B) —	
<b>Battery</b>	2-17, 19-21	Technical data 11-3
Charging	2-17	<b>Brake master cylinder</b> 1-20
Electrolyte level	19-21	<b>Body</b> 18-1
<b>Brakes</b>	11-1, 19-9	Accessories 18-34
Fluid level	19-12	Sheet metal 18-1
Line	11-30	Special tool 18-35
Shoe	19-10, 11-16	<b>Bonnet</b> 18-4
Shoe adjustment	11-17	<b>Bumpers</b> 18-8
<b>Brakes and wheels</b>	11-3	Front bumpers 18-9
		Rear bumpers 18-9
		<b>Bypass valve</b> 11-24
	— (C) —	
<b>Cam chain tensioner</b>	4-20	<b>Characteristics diagram</b> 7-39
Guide roller	4-22	<b>Check and adjustment</b>
<b>Camber angle</b>	12-4	Front wheel alignment 12-3
<b>Camshaft</b>	4-23	Toe-in 10-17
Drive	4-19	<b>Choke adjustment</b> 2-5
<b>Carburetor</b>	2-5, 14-1	<b>Clutch</b> 5-1, 19-9
Accelerator system	14-16	Disassembled view 5-1
Air system	14-2	Drum (Hondamatic) 7-137
Assembly and adjustment	14-11	Hub (Hondamatic) 7-137
Description	14-1	Pedal lash 5-11
Fast idle adjustment	2-6	Piston (Hondamatic) 7-137
Float system	14-3	Technical data 5-3
High speed system	14-5	<b>Contact breaker</b> 2-10, 4-16, 19-5
Idle system	14-3	<b>Control pressure (Hondamatic)</b> 7-41
Inspection	14-10	<b>Constant speed ball joint</b> 9-4
Maintenance	14-9	<b>Countershaft</b> 7-140
Medium speed system	14-5	<b>Cooling air shroud</b> 4-12
Off-idle system	14-4	
Starting system	14-6	
Trouble diagnosis	14-16	
	— (D) —	
<b>Defroster nozzle</b>	16-9	Installation 18-15
<b>Differential</b>	8-1, 7-147	<b>Door lock</b> 1-16
<b>Dismounting of engine</b>	3-4	<b>Double cross universal joint</b> 9-7
<b>Dismounting and mounting of power unit</b>	3-1	<b>Drive (Hondamatic)</b> 7-58
<b>Disk brake</b>	11-18, 11-3	<b>Drive shaft</b> 9-2-1, 1-21
<b>Door</b>	18-1	<b>Drive sprocket</b> 4-50
Adjustment	18-15	<b>Driven sprocket</b> 4-50
Assembly	18-10	<b>Dwell angle</b> 2-11

## 20-2 ALPHABETICAL INDEX

	— (E) —	
<b>Engine cross section</b>	4-4~5	4-7
<b>Engine cooling</b>	4-12	<b>Engine trouble diagnosis</b> 2-29
Description	4-12	<b>Exhaust system</b> 15-2
Maintenance	4-13	Description 15-2
<b>Engine oil</b>	2-1, 19-3, 19-4, 1-19,	Maintenance 15-3
		Special tool 15-7
		<b>Exhaust silencer</b> 15-4
		<b>Electrolyte</b> 2-17
	— (F) —	
<b>Fan belt</b>	2-1, 19-6	<b>Front grille</b> 18-8
Replacement	4-13	<b>Fuel</b> 1-22
<b>Filter element</b>	2-5	<b>Fuel filter</b> 2-9
<b>Flow of hydraulic fluid</b>	7-47	<b>Fuel pump</b> 2-9, 14-21
<b>Float level</b>	2-7	Description 14-21
<b>Fluid level</b>	19-8	Specification 14-21
<b>Fluid change</b>	19-8	Removal and installation 14-22
<b>Fluid, automatic transmission</b>	1-20	Inspection and trouble diagnosis 14-23
<b>Foot brake</b>	19-9	<b>Fuel solenoid valve</b> 2-6
<b>Front bumper</b>	18-9	<b>Fuel strainer</b> 19-7
<b>Front damper</b>	12-6	<b>Fuel system</b> 2-9
<b>Front fender</b>	18-7	<b>Fuel tank</b> 2-9
<b>Front grille</b>	18-8	Description 14-24
<b>Front suspension</b>	12-5	Maintenance 14-24
Description	12-5	<b>Fundamentals of Hondamatic</b> 7-4
<b>Front wheel bearing</b>	1-21	
	— (G) —	
<b>Gear shift lever and rod</b>	6-14	18-33
<b>Gear shift mechanism</b>	6-9	<b>Governor curve</b> 7-45
<b>General information</b>	1-1	<b>Governor pressure</b> 7-44
<b>Generator</b>	2-21	<b>Governor valve</b> 7-53, 7-144
<b>Glove compartment</b>	18-26,	
	— (H) —	
<b>Heater (engine type)</b>	16-3	Maintenance 7-161
Description	16-3	Trouble diagnosis 7-176~185
Removal and disassembly	16-4	<b>Housing clearance (Hondamatic)</b> 7-91
<b>Heater (exhaust type)</b>	16-6	<b>Hydraulic circuit illustration</b> 7-69~78
Description	16-6	<b>Hydraulic controls</b> 7-36
Removal and disassembly	16-7	Valves 7-48
Installation	16-8	<b>Hydraulic fluid circulation</b> 7-67
<b>Hondamatic transmission</b>	7-1	
	— (I) —	
<b>Idle adjustment</b>	19-7	<b>Instrument panel (deluxe)</b> 18-30
<b>Ignition</b>	4-15	(STD) 18-24, 18-26, 18-31
Coil	4-15	Console 18-24
Switch	1-16	
Timing	19-5, 2-10	

	— (K) —		
Key	1-15	Removal and disassembly	12-9
Knuckle and lower arm	12-9	King pin inclination angle	12-4
	— (L) —		
Line pressure	7-41	Low crankcase	7-127
Characteristics (Hondamatics)	7-42	Lock	1-15
Linkage, steering	19-16	Lubrication	1-18
Low (Hondamatic)	7-59	Lubricant	1-22
Low gears	7-126, 7-142	Lubricating, engine	4-6
	— (M) —		
Main manual valve	7-57	Adjustment	7-107, 7-150
Main/timing valve body	7-100	Manual range	7-32
Main valve body	7-101	Mechanical spark advancer	2-12
Mainshaft assembly	7-129	Characteristic	2-17
Master cylinder	11-5	Model and type	1-1
Cleaning and inspection	11-10	Motor generator brush	2-21
Manual shift drive arm	7-107		
	— (N) —		
Neutral (Hondamatic)		Neutral range	
	— (O) —		
Oil filter	4-7	One-way clutch	7-11, 7-143
Oil pump	4-7		
	— (P) —		
Pad, disk brake	11-21, 19-10	Physical dimension	1-7~10
Parking brake	19-11, 11-31	Point gap adjustment	2-11
Parking (Hondamatic)	7-61	Pressure pump	7-46
Parking brake system	7-148	Pressure test (automatic)	7-165
Parking pawl mechanism	7-28	Pressure tester	7-170
Pedal height adjustment	5-11	Proportioning valve	11-25
Pedals and pedal linkages	11-34	Primary drive	4-44
Removal	11-34	Primary drive mechanism	7-44, 7-112
Inspection	11-35	Primary clutch	7-15, 7-115
Installation	11-36	Pump discharge test	14-23
Performance curve	1-11~14		
	— (Q) —		
Quarter window glass	18-23		
	— (R) —		
Range selection	7-34	Replacement of differential oil seal	8-4
Rear axle	13-1	Reverse (Hondamatic)	7-60
Rear bumper	18-9	Reverse gear	7-125
Rear compartment lid	14-8, 18-5	Reverse system	7-26
Rear suspension	12-11	Reverse range	7-33
Regulator	2-21~25	Road test	2-29
Valve	7-12, 7-48, 7-88	Road test (Hondamatic)	7-163
Relief valve	7-18	Rocker arm	4-23
Removal and assembly (Hondamatic)	7-86		

## 20-4 ALPHABETICAL INDEX

	— (S) —	
<b>Second (Hondamatic)</b>	7-59	Removal and installation
Clutch (Hondamatic)	7-19	Inspection
<b>Secondary clutch (Hondamatic)</b>	7-18, 7-134	<b>Stall speed test (Hondamatic)</b>
<b>Selector</b>		19-13
Cable adjustment	19-8	<b>Steering</b>
<b>Serial number and identification plate</b>	1-1	Angle
<b>Servo valve</b>	7-55, 7-124	Technical data
<b>Shift valve</b>	7-61~63	Tie-rod
Fork	7-125	Wheel
<b>Side clearance (Hondamatic)</b>	7-91	Gear box
<b>Silicon diode</b>	2-27	Gear box
<b>Splash guard plate</b>	18-7	Trouble diagnosis
<b>Sprag clutch</b>	7-24	Linkage
<b>Speedometer</b>	18-30	<b>Suspension</b>
Gear	7-126	Trouble diagnosis
<b>Spark plug</b>	2-13, 4-16, 19-6	Special tool
		Technical data
		2-2
	— (T) —	
<b>Tail gate</b>	18-17	Characteristics
<b>Tappet clearance</b>	19-4	<b>Tire rotation</b>
<b>Technical data of engine</b>	4-1	19-18
<b>Third clutch</b>	7-21	<b>Torque converter</b>
<b>Third (Hondamatic)</b>	7-60	7-5, 7-94
<b>Throttle cable</b>	11-36	Case
Pressure	7-43	Case cover
Secondary cable adjustment	19-9	Housing
Adjustment	2-6	<b>Transmission-manual</b>
Valve	7-51	6-1
<b>Toe-in</b>		<b>Transmission, technical data</b>
Checking and adjusting	10-17	6-3
<b>Timing valve (Hondamatic)</b>	7-64	<b>Transmission gear</b>
Body	7-104	6-3
		<b>Transmission-Hondamatic</b>
		Diagnosis
		Fluid strainer
		Power train
		6-1
		<b>Trunk lid lock</b>
		1-17
	— (V) —	
<b>Vacuum spark advancer</b>	2-13	Clearance adjustment
Characteristics	2-13	Train
<b>Vacuum booster</b>	11-27	Adjustment
<b>Vacuum ignition advancer</b>	2-13	2-3
<b>Valve timing</b>	2-3	<b>Ventilation</b>
Clearance	2-3	Removal of f. ventilator
		Removal of r. ventilator
		16-2
		16-2
	— (W) —	
<b>Wheel</b>	19-13	Inspection before balancing
Alignment	19-17	Balancing procedure
Bearing play	19-18	Special tools
Balance	19-18	Trouble diagnosis
Cylinder	11-13, 11-14, 19-10	Check and adjustment
<b>Wheel and tires</b>	11-37, 19-18	12-3
Description	11-37	<b>Windshield</b>
Static wheel balancing	11-37	Washer
Dynamic wheel balancing	11-37	Glass
		18-20
		18-21
		18-20

